




# BRAUN

## Sommelier HT 600



[www.braun.com/register](http://www.braun.com/register)

Type 4118

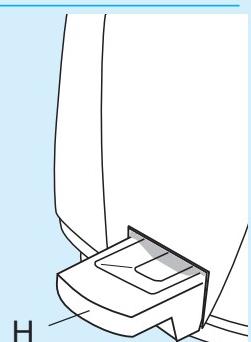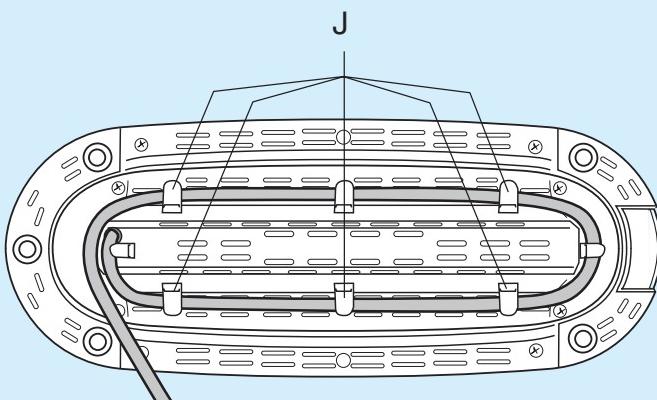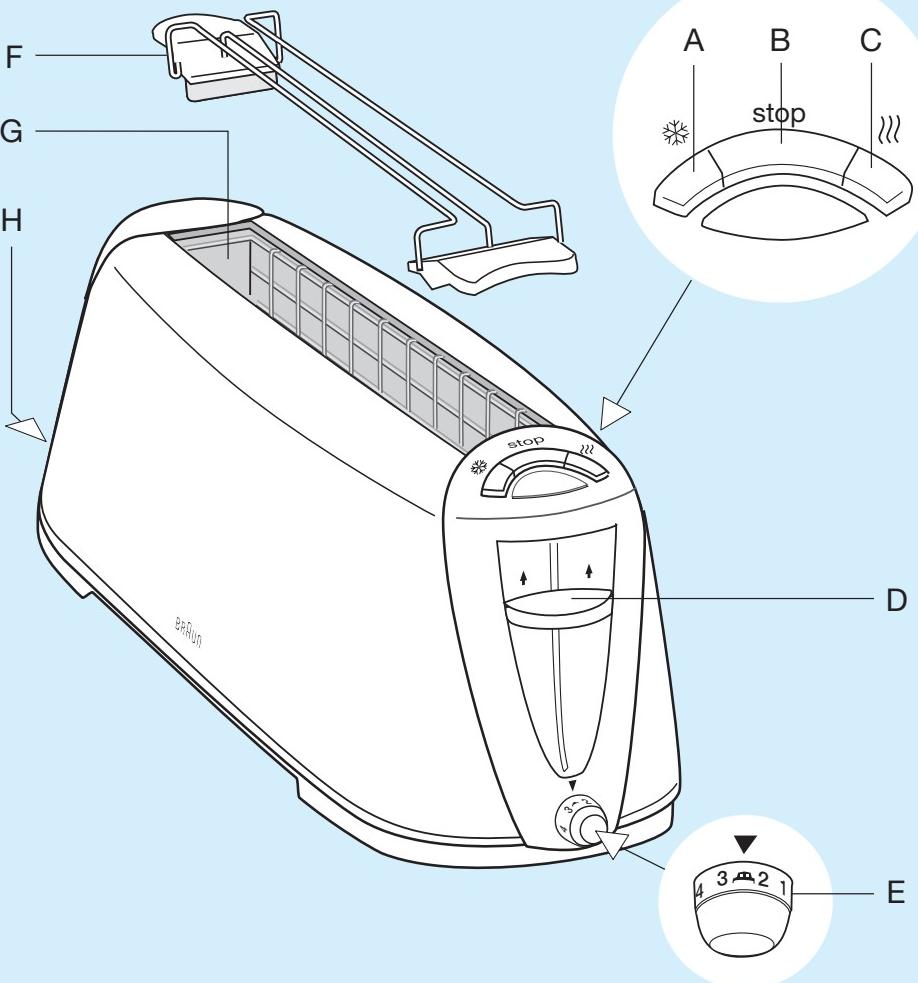

## 한국어

본 제품은 당시의 업격한 기준에 의거하여 만들어진 우수한 품질과 기능 그리고 디자인을 갖춘 제품입니다. 저희 브리운 제품을 구입해 주셔서 감사합니다.

### 주의 사항

제품을 사용하시기 전에 사용 설명서를 주의 깊게 읽어 주십시오.

안전을 위하여 어린이의 손이 닿지 않는 곳에 두십시오.

부재시에는 사용하지 마십시오.

전원을 연결하시기 전에 사용전압이 제품에 표시된 전압과 일치하는지 확인하십시오.

토스터의 뜨거운 내부를 만지지 마십시오. 코드가 내부로 들어가지 않도록 주의하십시오.

토스터 내부로 금속 물질을 집어넣지 마십시오.

딱딱한 뺨이나 얇은 비스켓 등의 음식은 굽지 마십시오.

토스터 입구를 덮거나 호일로 쌓 음식을 집어넣지 마십시오.

뺨 부스러기 받침대를 뺨 상태로 사용하지 마십시오.

반드시 제품이 똑바로 세워진 상태에서 사용하십시오.

뺨이 될수도 있으므로 커튼이나 다른 인화성 물질 주위 또는 아래에서 사용하지 마십시오.

토스터는 시간이 지남에 따라 점점 뜨거워집니다. (특히 금속 부분) 제품을 식혀서 보관하십시오.

브라운 전자 제품은 안전 기준에 적합하게 제조되었습니다.

제품의 수리(코드 교환 포함)은 반드시 브라운 서비스센터에 맡겨 주십시오.

잘못되거나 무자격자에 의한 수리는 사고나 사용자의 상해를 초래할 수 있습니다.

본 제품은 일반 가정용으로 제조되었습니다.

### 제품 명세

A 해동 스위치

B 수동 정지 스위치

C 데우기 스위치

D 리프트(뺨 들어올림 장치)

E 뺨 굽기 조절 장치

F 뺨 받침

G 토스터 입구

H 뺨 부스러기 받침대

J 코드 보관 장소

처음 사용하시기 전에 빈 토스터를 <4>에 맞추고 2-3번 가열합니다.  
이 과정을 통해 제조 공정에서 생긴 냄새를 없앨 수 있습니다.

### 작동방법

토스터 입구에 들어갈 수 있는 뺨은 모두 구울 수 있습니다.

- 뺨 부스러기 받침대(H)를 확실하게 제 자리에 끼우십시오.
- 뺨을 넣고 나서 리프트(D)를 누르십시오.
- 다양한 굽기 조절 장치(E)를 원하는 상태에 따라 <1>(약)에서 <7>(강)까지 선택합니다.
- 선택한 굽기 정도에 따라 시간이 다 되면 자동으로 리프트가 올라오면서 뺨도 올라옵니다.
- 리프트(D)를 위로 당겨서 뺨을 더 들어올릴 수도 있습니다.
- 뺨 굽기를 멈추고 싶다면 수동 정지 스위치(B)를 누르십시오. 뺨이 올라오고 토스터가 꺼집니다.
- 토스터가 갑작스럽게 꺼졌다면 다시 리프트를 내리기만 하면 됩니다.

### 뺨이 토스터에 걸리면

만약 토스터 안(G)에 뺨이 걸렸다면, 플러그를 빼고 토스터를 식힌 후에 금속이 아닌 나무 젓가락 등으로 조심스럽게 뺨을 꺼냅니다.

### 냉동된 뺨

냉동된 뺨을 구우시려면 굽기 조절 장치(E)를 원하는 정도로 맞춘 후, 리프트를 누른 뒤 해동 스위치(A)를 누르십시오.

### 데우기

온도가 식은 토스터를 재 가열하려면 리프트(D)를 누르고 데우기 스위치(C)를 누릅니다.

### 토스터 입구에 들어가지 않는 뺨

토스터 입구(G)에 맞지 않는 뺨을 구우려면 뺨 받침(F)을 사용하십시오. 선반은 꼭 르重整이나 패스트리류에만 사용하십시오. 토스터 내부의 온도를 증가시킬 수 있으므로 케이이나 피자, 베이킹 그릇이나 통째의 뺨을 선반에 올려놓지 마십시오. 또한 선반 위에 뺨을 올릴 때는 호일로 감싸서 올리지 마십시오. 가열을 위해 굽기 조절 장치(E)를 르重整이 그려진 아이콘에 맞추고 리프트(D)를 누르십시오.

### 청소

청소 전에는 항상 제품의 플러그를 뽑고 제품을 식히십시오. 절대로 제품을 흐르는 물에 씻거나 물 속에 담그지 마십시오. 제품 외부는 젖은 헝겊으로 닦아주십시오. 철 수세미나 연마제를 사용하지 마십시오. 소량의 그릇 세척액을 사용하셔도 됩니다. 절대로 알코올이나 가솔린, 벤젠등의 용매제를 사용하지 마십시오. 가끔씩 뺨 부스러기 쟁반을 끼나서 비워 주십시오.

본 설명서는 사전 예고 없이 변경될 수 있습니다.

본 제품은 EMC2004/108/EC 지침과 저전압 규정  
2006/95/EC를 따르고 있습니다.



**품질 보증**

- 본 제품은 **구입일로부터 1년간** 품질을 보증합니다.
  - 1년간의 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.
  - 보증기간 내에라도 소비자의 구체사유에 의한 파손(전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.
  - 브라운 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 브라운 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다. 그리고 본 제품의 구입일자가 판매점에 의해 혹은 구입시의 영수증에 의해 확인되어야만 정상적인 품질 보증품으로 인정됩니다. (**구입시 영수증을 잘 보관하시어 애프터 서비스 시 불이익이 없도록 하십시오.**)
  - 애프터 서비스를 받으셨더라도 원래의 품질보증기간이 연장되는 것은 아닙니다.

브라운 제품의 보상기준은 재정경제부고시 소비자 피해보상규정에 따릅니다

A/S 문의: 1588-1588

가까운 대우이례 서비스.

기기운 네 | 알리시미드 만리에서 A/S를 받으니 | 했답니다

—니운세상—

<http://www.braun.com>  
<http://www.braun.co.kr>

<http://www.braun.co.kr>

품질보증서	
본 제품은 실사용한 품질보증서입니다. 기준을 거쳐서 제조·수입된 제품입니다. 여기 기재한 내용은 본래의 품질보증서입니다.	
제품명	모델명
구입일	보증기간
고	구입일로부터 1년
고	판매점
객	점
<b>한국 피엔씨 판매 (유)</b> 서울특별시 강남구 역삼동 679-4 INGERICA 타워 전화 080-500-40000~40009	

# English

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you thoroughly enjoy your new Braun appliance.

## Caution

Please read the use instructions carefully and completely before using the appliance.

This appliance must be kept out of reach of children. Do not use unattended.

Before plugging into a socket, check that your voltage corresponds with the voltage printed on the bottom of the appliance.

Avoid touching hot insides. Never let the cord come in contact with the inside.

Do not put metal objects into the toaster.

This appliance is not suitable for toasting crisp bread, rusk, or similar food.

Never cover the toaster slot, nor insert food covered with foil.

Never use without the crumb tray in place.

Only use in upright position.

Bread may burn. Therefore do not use near or below curtains or other flammable materials.

The appliance will get hot, especially the metal parts. Let it cool down before storing.

Braun electric appliances meet applicable safety standards. Repairs on electric appliances (including cord replacement) must only be carried out by authorized service centres. Faulty, unqualified repair work may cause accidents or injury to the user.

This appliance was constructed to process normal household quantities.

## Description

- A Switch for defrosting
- B Manual stop switch
- C Switch for rewarming
- D Bread lift
- E Variable browning control
- F Bread and roll rack
- G Toaster slot
- H Crumb tray
- J Cord storage

Before using for the first time, heat up the empty toaster 2 to 3 times at setting «4». This will remove possible odours caused by manufacturing processes.

## Operation

You can toast all sizes of bread which fit the toaster slot.

- Ensure the crumb tray (H) is in place.
- Insert the bread, then push down the lift (D).

- With the variable browning control (E) choose the degree of browning you prefer from «1» (light) to «7» (dark).
- When the selected degree of browning has been reached, the bread will be lifted automatically.
- You can lift the bread further by shifting the lift (D) upwards.
- If you wish to interrupt the toasting, push the manual stop switch (B). The bread will be lifted and the toaster will be turned off.
- If the toaster shuts off unexpectedly, simply start it again.

## Jammed bread

If bread is jammed in the toaster slot (G), unplug the toaster, let it cool down and carefully remove the jammed bread with a non-metallic, blunt tool.

## Frozen bread

If you wish to toast frozen bread insert the bread, choose the degree of browning you prefer (browning control E), push down the lift (D) and then push the switch for defrosting (A).

## Rewarming

If you wish to rewarm toast that has cooled down, push down the lift (D), then push the switch for rewarming (C).

## Bread and roll rack

To warm up food which does not fit the toaster slot (G), you can use the bread and roll rack. Use the rack (F) only for bread, rolls and pastries. Do not attempt to use with cakes, pizza, baking tins or whole loaves. Such large foods will cause heat accumulation within the toaster. Also, do not place any rolls etc. on the rack which are wrapped in any kind of foil.

To warm, switch the browning control (E) to the position with the roll symbol and push down the lift (D).

## Cleaning

Always unplug the appliance and allow to cool down before cleaning. Never clean the appliance under running water, nor immerse it in water. Clean the exterior surfaces with a damp cloth only. Do not use steel wool or abrasive cleaners. Small amounts of dishwashing liquids may be used.

Never use any solvents such as alcohol, gasoline or benzene. Occasionally pull out and empty the crumb tray (H).

Subject to change without notice

This product conforms to the European Directives EMC 2004/108/EC and Low Voltage 2006/95/EC.



### **Guarantee**

We grant a 1 year guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate any defects in the appliance resulting from faults in materials or workmanship, free of charge either by repairing or replacing the complete appliance at our discretion.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.